


Easy Fit Wall Mounting Pack

Fitting Instructions

WITH YOUR ORDER YOU WILL RECEIVE:

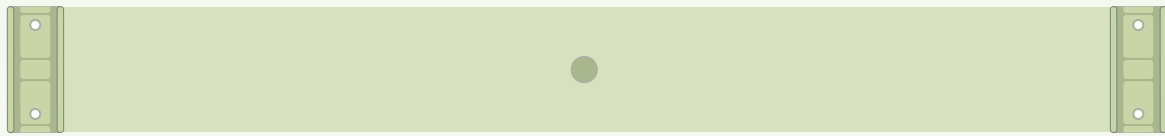

Easy fit MDF mounting plate with 2 brackets pre fitted to it (x1)



Screws (x5)



Plugs (x5)



Washer (x1)

TO DO THIS JOB YOU NEED


- 1 x Pencil
- 1 x Spirit level
- 1 x Tape Measure
- 1 x Drill with a 7mm drill bit
- 1 x Pozidrive screwdriver

HERE'S WHAT TO DO

First, mark on the wall above your bed where to mount the brackets. It is very important that you follow these instructions exactly as this will ensure that your headboard ends up hanging above your bed with the base of the headboard just touching your mattress. If you have a plasterboard wall then you **MUST** go to your local DIY store and buy special plasterboard wall fixings, the wall plugs supplied will not be safe and you **MUST NOT** use them. They are designed for solid walls only. All good local DIY/hardware stores have plasterboard wall fixings and you should ask their advice. If you are in any doubt you should get a qualified fitter/handyman to fix your headboard.


GETTING THE FIRST HOLES IN THE RIGHT PLACE

For ALL 24ins (61cm) high headboards, and Annet, Bardsey, Bryher, Caldey, Cardigan, Puffin, Samson and Tresco models, the centre hole in the MDF wall mounting plate is to be 18½ inches (470mm) above the mattress. For ALL other models the hole is to be located exactly 25½ inches (650mm) above the mattress.

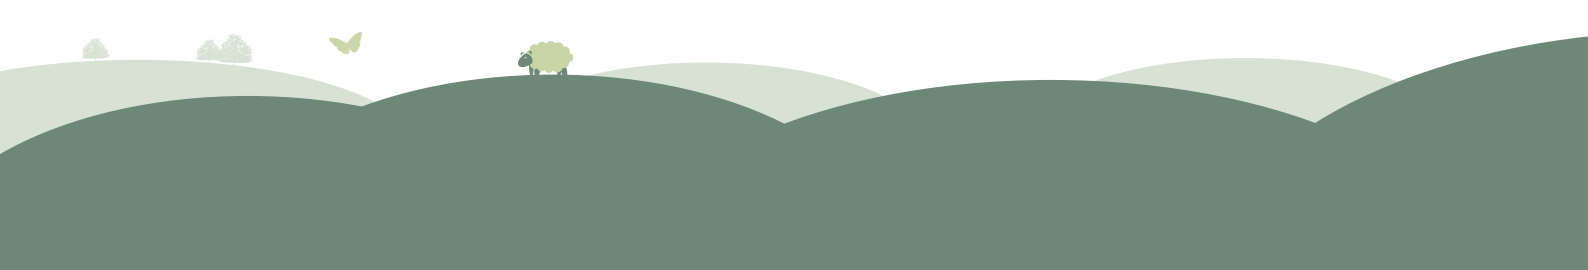

Measurement diagram

See Step 1

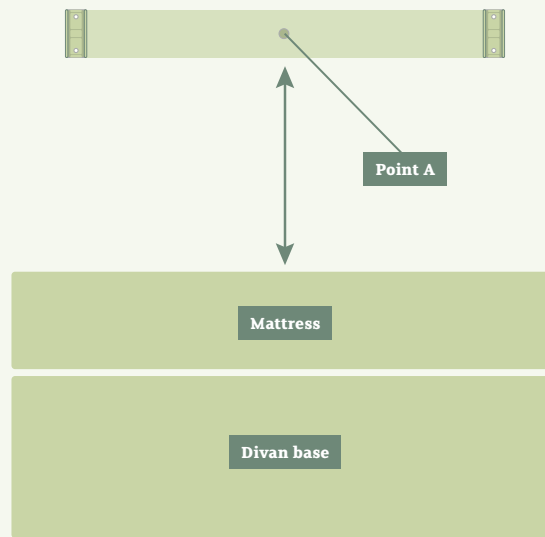

STEP 1

Place the bed where you want it to go. Make a small pencil mark on the wall in the centre of your bed at the same height as the top of your mattress. Now pull the bed away from the wall.

For ALL 24ins (61cm) high headboards, and Annet, Bardsey, Bryher, Caldey, Cardigan, Puffin, Samson and Tresco models only

Measure a vertical distance of exactly 18½ inches (470mm) from the point that you have just marked (the top of the mattress). Mark this Point A

For all other models except those named above

Measure a vertical distance of exactly 25½ inches (650mm) from the point that you have just marked (the top of the mattress). Mark this Point A.

STEP 2

Now drill a 7mm hole at point A and insert a wall plug into it. Ensuring the widest part of the brackets, that are mounted on the MDF plate, are at the TOP, place the plate on the wall and insert the screw through the washer provided, then through the centre hole in the plate and into the plug you have just inserted at point A. Tighten the screw until it is firmly in place, but not too tight. Place a spirit level on the MDF plate and level it.

STEP 3

Now mark the four holes, two at each end in the empty holes in the top and bottom of the wall mounting brackets. Swing the plate out of the way, (just enough) so you can drill 2 x 7mm holes at each end and insert the wall plugs into the holes in the wall (or special plasterboard fixings if you have a plasterboard wall). Check again that the widest part of the brackets that you are about to fix on the wall are at the TOP, then using the screws provided, fix the headboard brackets on the wall using all 4 holes.

STEP 4

You should now have one single screw holding the MDF plate in the centre and 2 screws holding each bracket at either end. Now simply hang your headboard on the wall, by holding it against the wall about 6 ins above where you want it to end up and lower it down onto the brackets. It should be held firmly in place at both ends.

