


Easy Fit Wall Mounting Pack

Assembling and fixing a winged headboard

YOUR WINGED HEADBOARD COMES IN 3 PARTS (HEADBOARD AND 2 X WINGS) AND REQUIRES 2 PEOPLE TO ASSEMBLE IT SECURE IT IN POSITION. WITH YOUR ORDER YOU WILL RECEIVE:

HEADBOARD PACK

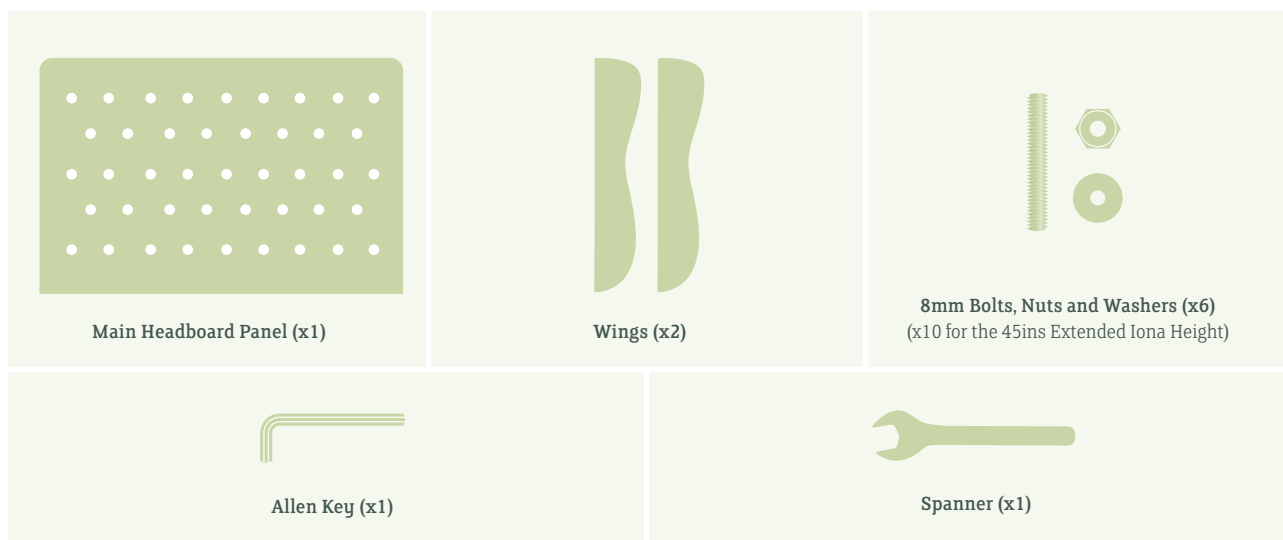


EASY FIT WALL MOUNTING PACK



TO DO THIS JOB YOU NEED

- 1 x Pencil
- 1 x Spirit level
- 1 x Ruler
- 1 x Drill with a 7mm drill bit
- 1 x Pozidrive screwdriver

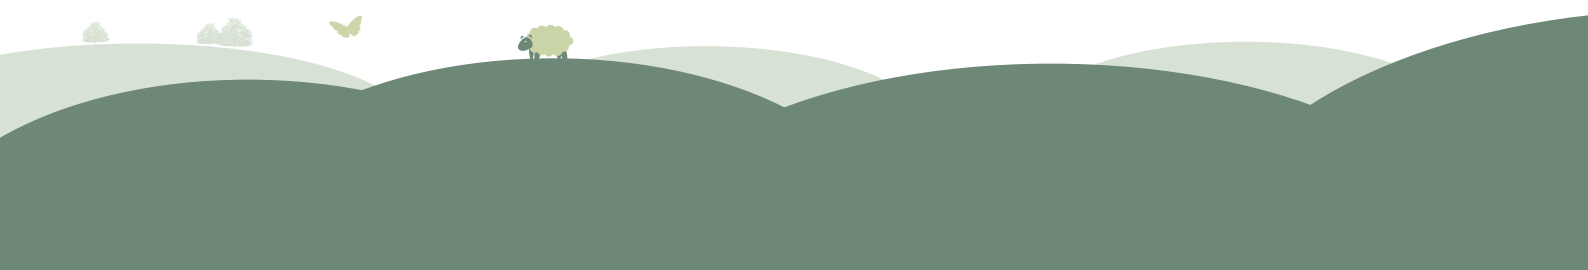

HERE'S WHAT TO DO

1. Fixing the wings onto the headboard

With your bed in its correct position. Lay the headboard face down on the bed with the top of the headboard towards the foot end of the bed. Taking one wing at a time, locate the three threaded bolt holes on the inside of the wing (five for the higher models). These are marked by staples surrounding the holes. Insert one threaded bolt into each bolt hole taking care not to cross thread it. Tighten it in by hand only, when you feel resistance STOP and DO NOT OVERTIGHTEN. Once all bolts are located do the same with the second wing. Now line up the first wing (you should be looking down on the back of the wing and the foot of the wing should be at the pillow end). Push the bolts that you have just fitted through the holes in side block on the back of the headboard and push until they protrude through the side block. Put a washer onto each threaded bolt and then a nut. Ensuring that the wing is flush with the back of the headboard, use the spanner provided to tighten the nuts fully.

2. Fixing the headboard to the wall

There should be about 1/2 inch (15mm) clearance on either side of the mattress, to allow for tucking in of sheets etc. If necessary use the adjustable feet at the bottom of the wings to lift or lower the headboard and, using a spirit level, ensure it is level. Once you are happy it is set at the correct height, mark the wall with a pencil in the centre of the bed where the headboard and mattress meet.


Lay the headboard back down on the bed and pull the bed away from the wall so you can get at the wall to drill and fix the easy fit wall mounting pack.

It is very important that you follow these instructions exactly as this will ensure that your headboard ends up hanging above your bed with the base of the headboard just touching your mattress. If you have a plasterboard wall then you MUST go to your local DIY store and buy special plasterboard wall fixings, the wall plugs supplied will not be safe and you MUST NOT use them. They are designed for solid walls only. All good local DIY/hardware stores have plasterboard wall fixings either Metal Cavity Anchors or Spring Toggles and you should ask their advice. If you are in any doubt you should get a qualified fitter/handyman to fix your headboard.



Measurement diagram

See Step 1

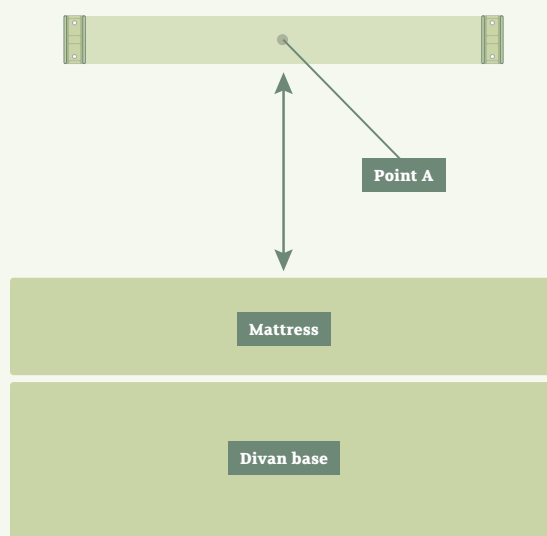

GETTING THE FIRST HOLES IN THE RIGHT PLACE

For the Winged Caldey the centre hole in the wall mounting plate is to be 18½ inches (470mm) above the mattress. For ALL other models the centre hole is to be located exactly 25½ inches (650mm) above the mattress.

STEP 1

Place the bed where you want it to go. Make a small pencil mark on the wall in the centre of your bed at the same height as the top of your mattress. Now pull the bed away from the wall.

- FOR WINGED CALDEY ONLY*
Measure a vertical distance of exactly 18½ inches (470mm) from the point that you have just marked (the top of the mattress). Mark this Point A.
- FOR ALL OTHER MODELS
Measure a vertical distance of exactly 25½ inches (650mm) from point that you have just marked (the top of the mattress). Mark this Point A.

STEP 2

Now drill a 7mm hole at point A and insert a wall plug into it. Ensuring the widest part of the brackets, that are mounted on the MDF plate, are at the TOP, place the plate on the wall and insert the screw through the washer provided, then through the centre hole in the plate and into the plug you have just inserted at point A. Tighten the screw until it is firmly in place, but not too tight. Place a spirit level on the MDF plate and level it.

STEP 3

Now mark the four holes, two at each end in the empty holes in the top and bottom of the wall mounting brackets. Swing the plate out of the way, (just enough) so you can drill 2 x 7mm holes at each end and insert the wall plugs into the holes in the wall (or special plasterboard fixings if you have a plasterboard wall). Check again that the widest part of the brackets that you are about to fix on the wall are at the TOP, then using the screws provided, fix the headboard brackets on the wall using all 4 holes.

STEP 4

You should now have one single screw holding the MDF plate in the centre and 2 screws holding each bracket at either end. Now simply hang your headboard on the wall, by holding it against the wall about 6 ins above where you want it to end up and lower it down onto the brackets. It should be held firmly in place at both ends.

